

### **Overview**

## **Precision XY Motion Platform**

## **FEATURES**

- Compact Low-Profile Design
- 100mm XY Travel
- Zero backlash, precision ground

ball screws

- Optical limit switches with home
- High resolution rotary encoder
- Brushless servo motor drive
- Crossed Roller Bearings
- Power-Off Brake



The CXY-BS series stages are designed for a variety of applications. This compact low profile ball screw stage is built for high duty cycles and long life and can attain high velocities for factory automation and semiconductor processing equipment. The CXY series offers extraordinary levels of orthogonality and parallelism resulting in high accuracy for combined axis motion. Recirculating ball linear ways and precision ground ball screws offer extremely smooth operation and velocity control. The XY stage can operate in any orientation and has optional brakes for added safety.




1040 CLASSIC ROAD | APEX, NC 27539 P: 866.906.2709 | F: 919.882.1430 www.griffinmotion.com

## **Motion Specifications**

# **Product Specifications**

Encoder Output	A quad B, index
Force X/Y, Continuous (N)	165
Force X/Y, Peak (N)	330
Force Z (N)	400
Flatness (µm)	5
Height (mm)	66
Length (mm)	350
Limit Switches	Yes
Linear Accuracy, Calibrated (µm)	4*
Linear Accuracy, Mechanical (µm)	15
Linear Encoder Resolution (µm)	0.125
Linear Repeatability (µm)	2
Linear Velocity (mm/s)	140
Moment X (N·m)	80
Moment Y (N·m)	80
Moment Z (N·m)	50
Moving Mass X (kg)	6.25
Moving Mass Y (kg)	2.32
Orthogonality (arc-sec)	10
Pitch +/- (arc-sec)	12
Screw Lead (mm)	2
Stage Mass (kg)	10.08
Straigtness (µm)	5
Width (mm)	294
Yaw +/- (arc-sec)	6
*Subject to control configuration	

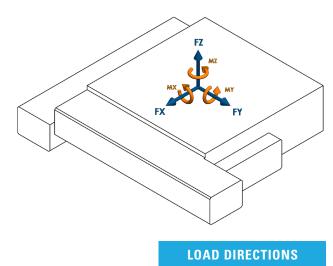

# Part Number Description

CXY	CXY Series
С	No Aperture
100	100mm Travel
BS	Ball Screw Drive
А	Brushless Servo Motor
Н	0.125µm Rotary
S	Standard Precision
D	Power Off Brake
00	Standard Product (Call for custom)


#### CXY-C-100-BS-A-H-S-D-00

1040 CLASSIC ROAD | APEX, NC 27539 P: 866.906.2709 | F: 919.882.1430 www.griffinmotion.com



CXY-C-100-BS-A-H-S-D-00

**Mechanical Specifications** 

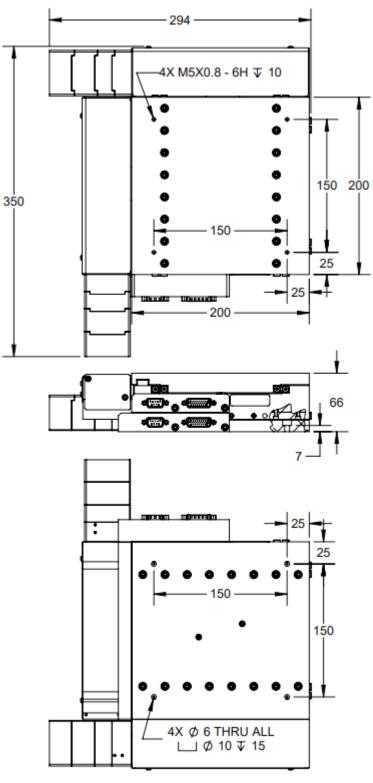

CXY-C-100-BS-A-H-S-D-00

Rev 2




## CXY-C-100-BS-A-H-S-D-00

1040 CLASSIC ROAD | APEX, NC 27539 P: 866.906.2709 | F: 919.882.1430 www.griffinmotion.com

### **Electrical Pinout**

Feedback Connector (DSUB26HD MALE)	
PIN	NAME
1	+5Vdc
2	A+
3	B+
4	RI+
5	LIM+
6	*
7	*
8	*
9	*
10	*
11	A-
12	B-
13	RI-
14	LIM-
15	*
16	*
17	*
18	*
19	GND
20	HALL A
21	HALL B
22	HALL C
23	HOME
24	*
25	*
26	*
*Reserved	

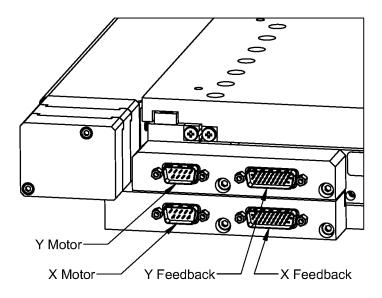

Motor Connector (DSUB9 MALE)	
PIN	NAME
1	PE
2	*
3	*
4	BRAKE+
5	BRAKE-
6	PHASE A
7	PHASE B
8	PHASE C
9	*
*Reserved	

#### CXY-C-100-BS-A-H-S-D-00



CXY-C-100-BS-A-H-S-D-00

1040 CLASSIC ROAD | APEX, NC 27539 P: 866.906.2709 | F: 919.882.1430 www.griffinmotion.com

## **Encoder Output**

Motor Specifications	
Motor Type	3 phase brushless DC
BEMF Output (V/Krpm)	2.57
Electrical Time Constant (msec)	0.38
Bus Voltage (Vdc)	24 nominal (100 max)
Max Continuous Current (Apk)	3.36
Motor Force Constant (Nm/Apk)	0.0216
Peak Current (Apk)	6.73
Pin to Pin Inductance (mH)	0.55
Pin to Pin Resistance (ohm)	1.51
Poles Per Revolution	6

Brake Specifications	
Brake Type	Power-off Engaged
Winding Voltage (DC)	24.0
Winding Current (A)	0.17
Winding Resistance (ohm)	138

Feedback Specifications	
Supply Voltage (Vdc)	5.0 ± 10%
Supply Current (mA)	250
Encoder Feedback	Yes
Encoder Type	Incremental
Encoder Output	Square Wave Quadrature, RS-422 compatible, A,B,Z, Differential Pair
Encoder Resolution	8000 cts/mm
Hall Switches	Yes
Hall Switch Output Type	Open-collector, no internal pullup resistor
Hall Switch max current (mA)	-20
Limit Switches	Yes
Limits Switch Output Type	CMOS
Limit Switch Output current (mA)	± 20.0
Home Switch	Yes
Home Switch Output Type	CMOS
Home Switch Output Current (mA)	± 20.0

A home switch is provided near the center of mechanical travel, and a limit switch at each end of travel. The encoder will output one index pulse per revolution of the motor. The index pulse is highly repeatable and can be used in coordination with the home switch to find an absolute position after power-up.

The limit switches will be pulled low throughout the travel range of the stage. The output will swing high at the end of travel and remain high until the mechanical limit of the stage is reached.